

# CAR DVD PLAYER WITH FM/AM TUNER USER MANUAL



Please read this User Manual carefully to ensure proper use of this product and keep this manual for further reference.

## CONTENTS

|                                            |    |
|--------------------------------------------|----|
| <b>1. Player character</b>                 |    |
| 1.1 Main feature .....                     | 2  |
| <b>2. Main function description</b>        |    |
| 2.1 Front panel description.....           | 3  |
| 2.2 Remote Control Description.....        | 4  |
| 2.3 Display Screen Descriptions .....      | 6  |
| 2.4 Real panel description.....            | 6  |
| <b>3. DVD function operation</b>           |    |
| 3.1 Switch state.....                      | 7  |
| 3.2 Turn on the Player.....                | 7  |
| 3.3 Select item through Menu.....          | 7  |
| 3.4 FF/FW .....                            | 7  |
| 3.5 Select Track.....                      | 8  |
| 3.6 Select Subtitle Language.....          | 8  |
| 3.7 Select Audio Channel.....              | 8  |
| 3.8 OSD.....                               | 8  |
| 3.9 Volume and Mute Control.....           | 8  |
| 3.10 Treble, Bass, Balance and Effect..... | 9  |
| 3.11 Effect Control.....                   | 9  |
| 3.12 System Setup.....                     | 9  |
| <b>4. FM/AM Tuner function Operation</b>   |    |
| 4.1 Select Tuner function.....             | 14 |
| 4.2 Global search band.....                | 14 |
| 4.3 Search band automatically.....         | 14 |
| 4.4 Search Band manually.....              | 14 |
| 4.5 Receive band.....                      | 14 |
| 4.6 save needful band.....                 | 14 |
| 4.7 Volume, Mute and Effect.....           | 15 |
| 4.8 Stereo, mono switch.....               | 15 |
| <b>5. AUX IN function operation</b>        |    |
| 5.1 Select AUX IN function.....            | 15 |
| 5.2 Volume, Mute and Effect.....           | 15 |
| <b>6. Troubleshooting</b>                  |    |
| <b>7. Specification</b>                    |    |
| <b>8. Accessories</b>                      |    |
| <b>9. Connections</b>                      |    |

## Player Character

### 1.1 Main Feature:

- 1 The unit have standard One Din IN-DASH dimension.
- 2 With FM/AM Tuner, FM Frequency range: 87.5~108MHz, AM Frequency range: 522~1620KHz.
- 3 LMF(Last memory function): when power is suddenly down, then power on again ,the player will play from last position it played, not from the beginning of disc.
- 4 Electronic anti-Shock function inside. The unit is provided to support disc track buffer time (CD/VCD 12sec , DVD 3~6sec , MP3 110sec ).
- 5 Dolby AC-3 and DTS audio decoders inside.
- 6 Composite function on front panel: ◀ DVD State as ◀◀previous function(FM/AM State can use as auto search backward), ▶ DVD State as ▶▶next function(FM/AM State can use as auto search forward).
- 7 The unit is also support CD-R upgrade.
- 8 2.1CH analog audio output, 2CH analog audio input.
- 9 2 way video output, can connect two monitor device at the same time.
- 10 Aux input jack on front panel.
- 11 FM can save 40 bands, AM can save 30 bands.
- 12 VFD display on panel.
- 13 45x 4 W / 4  $\Omega$  MAX Amplifier Output .
- 14 MPEG-4 Decoder inside.(Divx Disc are Compatible )

## Main Function Description

### 2.1 Front panel description :



- |                                                                  |                   |
|------------------------------------------------------------------|-------------------|
| 1. Disc Entrance                                                 | 2. Eject button   |
| 3.  VOL+                                                         | 4.  VOL-          |
| 5.  Next ( FM/AM State as search band forward automatically)     |                   |
| 6. Global search button                                          |                   |
| 7.  Previous (FM/AM State as search band backward automatically) |                   |
| 8. Power on/off button                                           | 9. IR Sensor      |
| 10. Play/pause button ( FM/AM State as select band upward )      |                   |
| 11. Stop button ( FM/AM State as select band downward )          |                   |
| 12. VFD Display                                                  | 13. Source button |
| 14. Mute button                                                  | 15. AUX input     |

## 2.2 Remote Control Description :



### KEYS ON REMOTE :

**POWER** Power on or Shut down the machine.

**SOURCE** Press the button can switch different mode.

**OSD** Display the machine status such as playing time, playing track information.

**OPEN/CLOSE** Press this button, the disc will be unloaded from the player, and press it again the disc will be loaded.

**SETUP** For machine Setup, please refer to the chapter about machine setup.

**SUBTITLE** Switch DVD subtitle channel.

**MENU** While playing DVD, push this button to display the optional menu included in the disc (whether it works depends on the type of disc).

**ENTER** Press this button to execute the entered number or the selected item.

▶ Play or Pause current playing.

■ While playing, press this button once to pause playing, and then press ▶ to resume playing. But if you press twice, the playing will be stopped completely.

**LANGUAGE** Multi-language selectable.

**L/R** Switch VCD audio channel.

**REPEAT** Repeat the selected chapter or title.

**PAL/NTSC** Switch PAL/NTSC/AUTO.

**SCAN** FM/AM State can auto search band and save.

**EFFECT** Setting audio effect e.g. treble/bass/balance etc.

**MEMORY** Save band when search some frequency.

⬆ DVD mode as up ( FM/AM tuner as take out a band upward ) .

⬇ DVD mode as down ( FM/AM tuner as take out a band downward ) .


⬅ DVD mode as left.

➡ DVD mode as right.

- » DVD mode as FF ( FM/AM tuner as search band manually ) .
- « DVD mode as FR ( FM/AM tuner as search band manually ) .
- » DVD mode as NEXT ( FM/AM tuner as search band forward automatically ) .
- « DVD mode as PRE ( FM/AM tuner as search band backward automatically ) .


**NUMBER** 0.....8,9,10+ etc .

## 2.3 VFD Display Description :

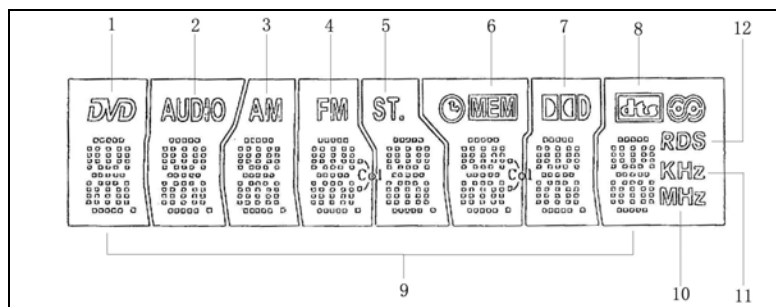

- |                               |                  |
|-------------------------------|------------------|
| 1. DVD STATE and DISC SYMBOL  | 7.DOLBY SYMBOL   |
| 2. CD , MP3 AUDIO DISC SYMBOL | 8.DTS SYMBOL     |
| 3. AM STATE SYMBOL            | 9.NUMBER DISPLAY |
| 4. FM STATE SYMBOL            | 10.FM FREQUENCY  |
| 5. STEREO ON/OFF SYMBOL       | 11.AM FREQUENCY  |
| 6. MEMORY SYMBOL              | 12.RDS SYMBOL    |

## 2.4 Rear Panel Description:

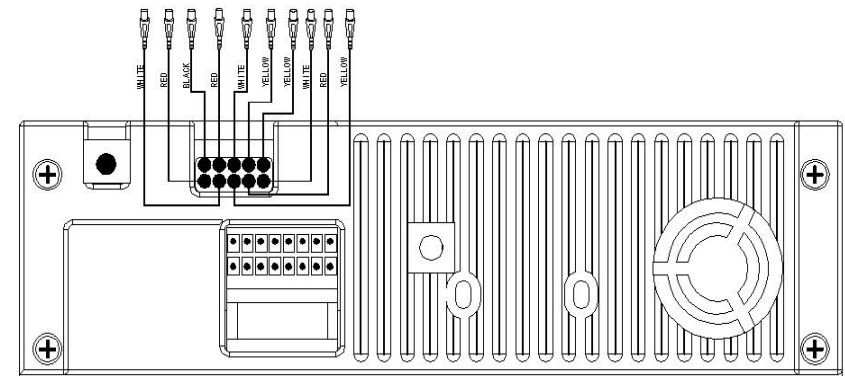

(Please refer to Connections Chapter)

## DVD Function Operation

### 3.1 Switch state

This unit provide four cycling mode: DVD , AUX IN , FM , AM; Press SOURCE button on remote control or SRC button on panel , we can switch among this four state.

### 3.2 Turn On the Player

- 1).Press **POWER** button on the front panel of player.
- 2).Operate TV remote control to shift TV to proper video input mode (VIDEO IN).
- 3).Put a disc into the disc entrance, with label side upward.
- 4).The player will slot in the disc automatically, and begin to read it, It can identify different disc formats then display it on the TV screen. If directory or menu picture display in the screen, you can press the direction buttons **▲**, **▼**, **◀** and **▶** buttons in the remote control to move lighting band to desired title and press [ENTER] button to select it, also you can directly press number buttons to select track.

### 3.3 Select item through Menu

If the DVD disc has menu, you can display the menu by pressing **MENU** button, then you can select a popular item to play according to following procedures.

1). Press **MENU**

The screen display menu picture, the content to be selected varies with different discs.

2). Press the directory buttons **↑**, **↓**, **←** or **→** to select the desired item.

3). Press **ENTER** to confirm the selected item.

### 3.4 fwd/rev :

When you press **FWD/REV** under the **Play** mode, the unit will start to **forward/reverse**. You can play discs at various speeds. With each consecutive press of **FWD/REV**, the playback speed changes. There are 4 speed levels for DVD discs in FWD/REV: X2, X4, X6, X8. There are 4 speed levels for disc types other than DVD disc: X2, X4, X8, X16. Press **PLAY** to resume the normal playback.

### 3.5 Select track

There are more than one operation procedures available

A. Press **⏭** or **⏮** to skip to the next or the previous track and play.

B. For those discs with track number, directly Press number buttons to enter the No. Of desired track If the screen displays "Φ" there may be three possible reasons: (1) the track in the disc is not numbered; (2) the number entered is beyond the scope; (3) the disc has no number select function .

C. Select among the song track list (such mp3 etc. menu list)

### 3.6 Select subtitle language

For DVD discs, you can Press **SUBTITLE** to switch the subtitle language. Keep pressing it, and the screen will display available languages alternatively.

### 3.7 Select audio channel

For DVD discs, you can press **LANGUAGE** to switch the audio channel.

And for other discs, press **L/R** button to switch L/R channel.

### 3.8 OSD

Press **OSD** button, TV screen will display current playing time and state, i.e. playing time and remaining time, playing chapter/track information, press **OSD** each time, the screen will show a time alternatively.

### 3.9 Volume and Mute Control

1) Press **↑** , **↓** button on panel or VOL+,VOL- button on remote control can control volume ;

2) Press MUTE button on panel or remote control, system will mute, press again, system exit mute mode.

### 3.10 Treble, Bass, Balance and Effect

Press EFFECT button , select audio effect as follow :

Treble---Bass---Balance---Effect---Stereo.

Press VOL+, VOL- button can change value of treble, bass, balance.

### 3.11 Effect Control


Under effect mode , Press VOL+, VOL- button can select audio effect as follow.

Custom---Normal---Jazz---Rock---Class---Pop---Custom.

### 3.12 System Setup Menu


You can press Setup key on the remote control to bring up the System Setup Menu when the unit is under the stop/playback mode.

**SETUP MENU Main Page**

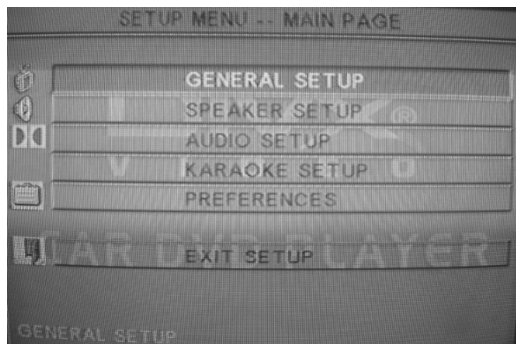

Press up/down direction button to select a item, then press ENTER.

## General Setup

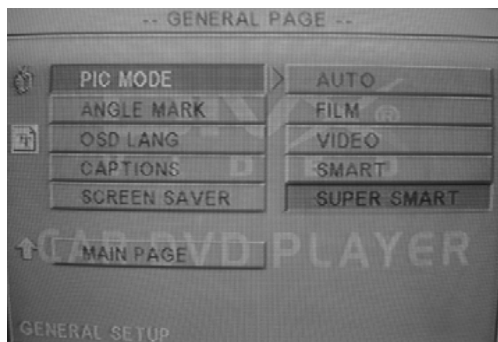

### PIC MODE

This adjusts the screen quality according to the material being play back.

- **AUTO**

The picture quality is adjusted automatically.

- **FILM**

Choose this setting to reproduce the picture quality of film material.

- **VIDEO**

Choose this setting to reproduce the picture quality of film material.

- **SMART**

Choose this setting to reproduce progressive and interlaced material with limited motion.

- **SUPER SMART**

Choose this setting to reproduce progressive and interlaced material with limited motion.(motion adaptive deinterlacing).

### ANGLE MARK

- **ON**

When a picture record in different angles is played back, angle mark is displayed on the screen.

- **OFF**

Angle mark is not displayed on the screen.

### OSD LANGUAGE

Select the ON Screen Display language.

- **ENGLISH**
- **FRENCH**
- **SPANISH**

### CAPTIONS(NTSC ONLY)

Some DVD videos contain subtitles, an enhancement of closed captions for hearing impaired persons. The DVD player automatically displays these special subtitles by setting this item to [ON].

- **ON**

The extended subtitles are displayed automatically.

- **OFF**

The extended subtitles are not displayed.

### SCREEN SAVER

If you pause a picture for a long time, the screen saver automatically operates by setting this item to [ON].

- **ON**

The screen saver is enabled.

- **OFF**

The screen saver is disabled.


### AUDIO Setup



DIGITAL OUT

OFF ⇄ RAW ⇄ PCM

### Preference Setup

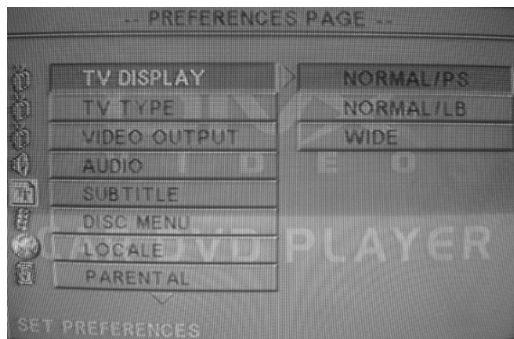

### TV DISPLAY

- **NORMAL/PS(Pan scan)**
- **NORMAL/LB(Letter Box)**
- **WIDE**

### TV TYPE

You can set the video Standard with this option.

**MULTI SYSTEM:** The player automatically selects NTSC or PAL depending on the disc.

**NTSC:** Outputs the NTSC signal only.

**PAL:** Outputs the PAL signal only.

### AUDIO:

Select the audio language.

- ENGLISH
- FRENCH
- SPANISH
- CHINESE
- JAPANESE
- OTHERS

### Notes

Depending on the disc, a language recorded on the disc may be given priority and selected automatically when the disc is loaded regardless of the setting.

### SUBTITLE

Select the subtitle language.

- ENGLISH
- FRENCH
- SPANISH
- CHINESE
- JAPANESE
- OTHERS
- OFF

### Notes

Some DVD videos may be set to display subtitles in a different language than you selected. A prior subtitle language may be programmed on the disc.

## DISC MENU

Select the disc menu language.

- ENGLISH
- FRENCH
- SPANISH
- CHINESE
- JAPANESE
- OTHERS

### Notes

Some DVD videos may not include your pre-selected language. In this case, the DVD player automatically display disc menus consistent with the disc's initial language setting.

## PARENTAL

DVD videos equipped with a parental lock function are rated according to their content. The content allowed by a parental lock lever and the way a DVD video can be controlled may vary from disc to disc. For example, some discs allow you to edit out violent scenes, or lock out play back of the disc altogether.

Change the Parental Level according to the settings printed on the DVD disc jacket or accompanying documentation. If you do not want to use Parental Level, select [NO PARENTAL].

## PASSWORD

### CHANGE

The password for PARENTAL is changed.

To change the password

1. Press the number buttons to enter old password, then press ENTER.

2. Press the number buttons to create a new 4-digit password, then press ENTER.
3. Press the number buttons to enter the new password, then press ENTER.

### Notes:

The password is set to "0000" by the initial setting.

## DEFAULTS

### ● RESET

Resets all settings other than PASSWORD to the factory settings.

## FM/AM Tuner Function Operation

### 4.1 Select Tuner function

Press **SRC** button on panel or **SOURCE** button on remote control, select FM/AM mode, the unit will switch to FM/AM state.

### 4.2 Global search band

under FM/AM state, press **SCAN** button can search band global and save band automatically.

### 4.3 search band automatically

- 1、Press **▶▶** button on remote control or **➡** button on panel, the unit will search band automatically and add frequency continually, until find a band.
- 2、Press **◀◀** button on remote control or **◀** button on panel, the unit will search band automatically and decrease frequency continually, until find a band.

### 4.4 search band manually

- 1、Press **▶▶** button on remote control or press **➡** button for a

period time on panel, we can search band manually and add frequency continually.

- 2、 Press ◀ button on remote control or ◀ button for a period time on panel, we can search band manually and decrease frequency continually.

#### 4.5 receive band

- 1、 Press ▲ button on remote control or press **PLAY/PAUSE** button, the unit will take out a band upward.
- 2、 Press ▼ button on remote control or press **STOP** button, the unit will take out a band upward.

#### 4.6 save needful band

for band which be find through automatically or manually , if we want to save, press **MEMORY** button, appearing **MEM** symbol on VFD means save successfully.

#### 4.7 volume, mute and effect

operating method can refer to chapter of DVD function operation.

#### 4.8 Switch state between stereo and mono

under stereo state, press VOL+ ,VOL- button can switch between stereo and mono state, appear or disappear ST symbol on VFD.

## AUX IN Function Operation

The unit provide two method for connect AUX IN function :

- 1 ) connect with AUX INL and AUX INR jack on rear panel;
- 2 ) connect with AUX IN jack on front panel;

#### 5.1 select AUX IN function

Press **SRC** button on panel or **SOURCE** button on remote control , select AUX IN mode, the unit will switch to AUX IN state.

#### 5.2 volume , mute and effect

under AUX IN state, we can adjust volume value, mute control, effect operation etc, operating method can refer to chapter of DVD function operation.

## Troubleshooting

Before requesting services for this DVD player, please check the items below for a possible cause of the problem you are encountering. Some simple checks or a minor adjustment on your part may eliminate the problem and restore the proper operation.

| Problem                           | Action                                                                                                                                                                                                                                                                                                                   |
|-----------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>POWER</b>                      |                                                                                                                                                                                                                                                                                                                          |
| The power supply is disconnected. | ➤ Please check if the AC power cord has been connected correctly.                                                                                                                                                                                                                                                        |
| <b>PICTURE</b>                    |                                                                                                                                                                                                                                                                                                                          |
| No picture                        | ➤ Replace the breakage video cable before you turn on the player.<br>➤ Re-check if the connector of player has been properly connected to TV set.<br>➤ Connect the video cable securely into the appropriate jacks and ensure that the equipment is connected firmly.<br>➤ Ensure that the power of TV set is turned on. |

| Problem                    | Action                                                                                                                                                                                                                                                                                                                                                                                                                       |
|----------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                            | <ul style="list-style-type: none"> <li>➤ Make sure if the appropriate video input mode is selected on the TV, so that the video image can be displayed on the screen properly.</li> </ul>                                                                                                                                                                                                                                    |
| Picture distortion         | <ul style="list-style-type: none"> <li>➤ The disc is dusty and needs to be cleaned.</li> <li>➤ It is normal for some distortion to occur when the Progressive Scan Mode of DISPLAY Setup is selected, even if the TV set is compatible with the progressive scan mode (525p). Therefore, please change the Scan Mode to Interlaced Scan.</li> </ul>                                                                          |
| Picture not suit TV screen | <ul style="list-style-type: none"> <li>➤ The troubled images may not be able to fill up the whole TV screen even after the Picture Mode of the Audio Menu is set. This is because the DVD images are fixed in width.</li> </ul>                                                                                                                                                                                              |
| <b>SOUND</b>               |                                                                                                                                                                                                                                                                                                                                                                                                                              |
| No sound                   | <ul style="list-style-type: none"> <li>➤ Check for the proper connections of the unit with the TV set and amplifier.</li> <li>➤ When the amplifier is connected, check if the amplifier power has been turned on and if the cable has been inserted into the appropriate jack.</li> <li>➤ Please change the audio cable with a new one if the cable is damaged.</li> <li>➤ If the unit has been played in Slow or</li> </ul> |

| Problem                                            | Action                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
|----------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                    | <p>Pause mode, press <b>Play</b> to return to the normal playback mode.</p> <ul style="list-style-type: none"> <li>➤ If the unit is played in X8, X16, X32 mode, press <b>Play</b> to return to the normal playback speed mode.</li> <li>➤ When the unit is in System Setting Menu / Program Menu, press <b>System Setting / PRG Play</b> to exit the system Menu / program menu. Or you can press <b>Play</b> to return to the normal playback mode.</li> <li>➤ If the unit is in the mute mode, please press <b>Mute</b> again to enable the normal sound play.</li> <li>➤ Turn on the unit's digital output if it is off.</li> <li>➤ If the sound track 2 of the SVCD is not recorded, no sound will be output when the track 2 is selected. Open up the Console Menu, and select track 1 for playback in the audio selection.</li> </ul> |
| Noise                                              | <ul style="list-style-type: none"> <li>➤ The disc is dusty and needs to be cleaned.</li> <li>➤ The noise comes from other interfaces except for DIGITAL OUT OPTICAL or COAXIAL interface if the played CD is DTS standard.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| No stereo sound effect when playing video CD or CD | <ul style="list-style-type: none"> <li>➤ Check if the digital output is turned on.</li> <li>➤ Press <b>Stereo</b> to select stereo sound.</li> </ul>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| <b>Operations</b>                                  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |

| Problem                                           | Action                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|---------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>The remote control does not work properly.</b> | <ul style="list-style-type: none"> <li>➤ Remove the obstacle between the DVD player and the remote control.</li> <li>➤ The remote control is positioned too far from the DVD video player. Operate the remote control within the operating distance.</li> <li>➤ Point the remote control at the remote sensor of the DVD video player.</li> <li>➤ If the batteries in the remote control are exhausted, please replace batteries with new ones.</li> </ul> |

|                                                     |                                                                                                                                                                                                                                                                                                                                                                                                                          |
|-----------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>Disc playback failure</b>                        | <ul style="list-style-type: none"> <li>➤ No disc is inserted. (No disc symbol appears on the screen). Please insert the intended disc.</li> <li>➤ The disc is placed upside down. Place the disc with the playback side down.</li> <li>➤ The disc is dusty. Please clean the disc.</li> <li>➤ There could be humidity in the unit. Please turn on the power and stay for 30 minutes without running the disc.</li> </ul> |
| <b>The player fails to play from the beginning.</b> | <ul style="list-style-type: none"> <li>➤ Because the play mode is in the Program, Random, Repeat or Repeat A-B mode. Press these relative functions again to restore the play mode. (Please refer to the Advanced Operations Chapter.)</li> <li>➤ While the DVD Title/Chapter or DVD Setup menu is displayed on the TV screen directly, or, while playing Video CD that includes PBC</li> </ul>                          |

|                                   |                                                                                                                                                                                                                          |
|-----------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                   | function, the Setup menu is displayed on the TV screen.                                                                                                                                                                  |
| <b>Stop playing automatically</b> | <ul style="list-style-type: none"> <li>➤ Some discs have recorded the automatic pause signal in the original recording. The unit will stop playing automatically at the segment where the signal is recorded.</li> </ul> |


If the remedies indicated above cannot solve the problem you encounter, consult your local dealer for service.

## Specification

|              |                             |                                                                    |
|--------------|-----------------------------|--------------------------------------------------------------------|
| General      | Power Supply                | DC 12V                                                             |
|              | Power Consumption           | 100 Watt.                                                          |
|              | Net Weight                  | 1.5kg                                                              |
|              | Dimensions                  | L170 x W178 x H50 mm                                               |
|              | Operating Temperature Range | -10°C~60°C                                                         |
| Disc         | Disc Type                   | 12cm CD/CDR/CDRW<br>12cm DVD/DVDR/DVD+RW                           |
|              | Playable                    | CD-Audio/HDCD/MP3/WMA<br>/VCD/SVCD/ Kodak Picture CD<br>/DVD       |
| Video Output | Composite Video             | 1.0 Vp-p (75 ohm load)                                             |
| Audio output | Analog Audio                | 2.1 CH(1L/2R)<br>Dolby AC-3 or DTS downmix<br>2 Vrms (@1KHz , 0dB) |
|              | S/N Ratio                   | ≥90 Db                                                             |
|              | Dynamic Range               | ≥85 dB                                                             |
| FM           | Frequency Range             | 87.5~108MHz                                                        |
|              | Limiting sensitivity        | 17dBu max                                                          |

|    |                      |              |
|----|----------------------|--------------|
|    | Frequency response   | 55Hz~~10KHz  |
|    | S/N Ratio            | ≥50dB        |
|    | Antenna Impedance    | 75Ω          |
| AM | Frequency Range      | 522~~1620kHz |
|    | Limiting sensitivity | 25dBu        |
|    | S/N Ratio            | ≥40dB        |
|    | Antenna Impedance    | 75 Ω         |

## Connections

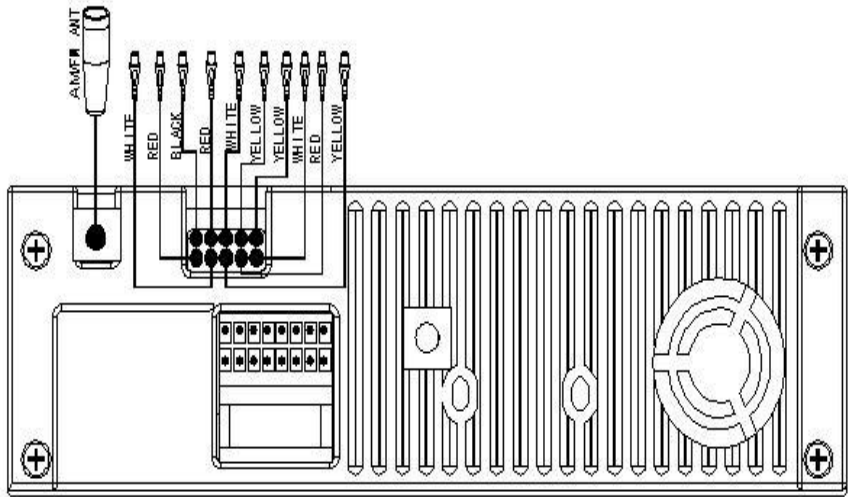

## Accessories

### Note:

Please confirm the accessories below when you purchase this unit.

|                                                                  |      |
|------------------------------------------------------------------|------|
| <input checked="" type="checkbox"/> Remote control               | 1Pcs |
| <input checked="" type="checkbox"/> Power Connector              | 1Pcs |
| <input checked="" type="checkbox"/> User Manual                  | 1Pcs |
| <input checked="" type="checkbox"/> Audio/Video connecting cable | 1Pcs |
| <input checked="" type="checkbox"/> Mounting Bracket             | 1Pcs |
| <input checked="" type="checkbox"/> Trim Ring                    | 1Pcs |
| <input checked="" type="checkbox"/> Mounting Screw               | 1Pcs |
| <input checked="" type="checkbox"/> Mounting Grommet             | 1Pcs |
| <input checked="" type="checkbox"/> Rear Strap                   | 1Pcs |
| <input checked="" type="checkbox"/> Keys                         | 2Pcs |
| <input checked="" type="checkbox"/> Screws                       | some |

